

## Capture Viper Hands Free Stand Quick Guide

### 1. Reading Mode

#### 1.1 Batch Mode

In batch mode, scanner starts scanning barcode when trigger is pressed. If trigger keeps being pressed, the scanning continues, with each barcode scanned once.



Batch Mode

#### 1.2 Trigger Mode

In trigger mode, scanner starts scanning barcode when trigger is pressed. If trigger keeps being pressed within LED timeout, the scanning continues. When trigger is released or LED timeout expires, the scanning stops.



Trigger Mode

#### 1.3 Auto-sensing Mode

In auto-sensing mode, scanner automatically starts scanning barcode when image change is detected within its field of view. scanner can still be triggered if trigger is pressed. When trigger is released or LED timeout expires, the scanning stops.



Auto-Sensing Mode

#### 1.4 Continuous Mode

In continuous mode, scanner keeps scanning barcodes continuously.



Continuous Mode

### 2. Beep Volume



High\*



Medium



Low

### 3. Stand Installation

