



Canon Photo Paper Plus SG-201

Semi-glossy - A4 (210 x 297 mm) - 260 g/m² - 20 sheet(s) photo paper - for
PIXMA iP3680 - MG8250 - MP198 - MP228 - MP245 - MP252 - MP258 - MP476 -
PRO-1 - PRO-10 - 100; S450

Group	Print Media
Manufacturer	Canon
Manufacturer item no.	1686B021
EAN/UPC	4960999405377

Description

The velvety texture of this semi-gloss paper gives you an amazingly rich quality. Photo Paper Plus Semi-Gloss produces vibrant images with low glare and a soft glossy finish for photo lab quality prints right at home.

Main features

Product Description	Canon Photo Paper Plus SG-201 - photo paper - semi-glossy - 20 sheet(s) - A4 - 260 g/m ²
Product Type	Photo paper
Surface Finish	Semi-glossy
Media Size	A4 (210 x 297 mm)
Printing Technology	Ink-jet
Media Weight	260 g/m ²
Included Qty	20 sheet(s)
Compatible with	PIXMA iP100, iP1880, iP2700, iP2702, iP3680, iP4680, iP4700, iP4820, iP4850, iX7000, MG8250, MP145, MP198, MP228, MP245, MP250, MP252, MP258, MP268, MP270, MP272, MP280, MP476, MP486, MP490, MP492, MP495, MP545, MP550, MP560, MP628, MP638, MP640, MP988, MP990, MP996, PRO-1, PRO-10, 100; S450

Extended details

General	
Shipping Width	24 cm
Shipping Depth	33.6 cm
Shipping Height	47.3 cm
Shipping Weight	473 g
Media	
Media Type	Photo paper
Surface Finish	Semi-glossy
Media Sizes	A4 (210 x 297 mm)

Printing Technology	Ink-jet
Included Qty	20 sheet(s)
Media Weight	260 g/m ²

Compatibility Information

Compatible with	Canon BJ-10, 10 EX, 10 SX, 130, 20, 200, 200E, 230, 30, 300, 330, 5, 80, W3000, W3050, W9000 Canon BJC-150, 210, 2100, 240, 3000, 4000, 4100, 4200, 4300 S, 4400 S, 4550, 4650, 4650 SP, 5000, 5100, 55, 5500, 600, 600 E, 6000 N, 610, 6100, 620, 6200, 6500, 70, 7000, 7100, 800, 800 PSW, 820, 8200, 8200 Photo, 85, 8500, 880 Canon i250, 320, 350, 450, 455, 470D, 475D, 550, 560, 6500, 70, 80, 850, 865, 905D, 9100, 950, 965, 990, 9900, 9950 Canon imagePROGRAF iPF500, iPF5000, iPF600, iPF700, iPF9000 Canon MultiPASS 1000, C10, C100, C20, C30, C50, C530, C635, C70, C75, C80, L60, L90 Canon PIXMA iP100, iP100 Bundle, iP100 with battery, iP1000, iP100wb, iP1200, iP1300, iP1500, iP1600, iP1600 Brockhaus, iP1700, iP1800, iP1880, iP1900, iP2000, iP2200, iP2500, iP2600, iP2700, iP2702, iP3000, iP3300, iP3500, iP3600, iP3680, iP4000, iP4000R, iP4200, iP4300, iP4500, iP4600, iP4680, iP4700, iP4820, iP4850, iP5000, iP5200, iP5200R, iP5300, iP6000D, iP6210D, iP6220D, iP6310D, iP6320D, iP6600D, iP6700D, iP8500, iP90, iP90v, iX4000, iX5000, iX7000, MG8250, mini220, mini260, mini320, MP110, MP130, MP140, MP145, MP150, MP160, MP170, MP180, MP190, MP198, MP210, MP220, MP228, MP240, MP245, MP250, MP252, MP258, MP260, MP268, MP270, MP272, MP280, MP450, MP460, MP470, MP476, MP480, MP486, MP490, MP492, MP495, MP500, MP510, MP520, MP520 Everyday, MP530, MP540, MP545, MP550, MP560, MP600, MP600R, MP610, MP620, MP628, MP630, MP638, MP640, MP640R, MP750, MP760, MP780, MP800, MP800R, MP810, MP830, MP950, MP960, MP970, MP980, MP988, MP990, MP996, MX330, PRO-1, PRO-10, PRO-100, Pro9000, Pro9000 Mark II, Pro9500, Pro9500 Mark II Canon PJ 1080A Canon S100, 200, 200x, 300, 300 Photo, 330, 330 Photo, 400, 400x, 450, 450 Photo, 4500, 500, 520, 520x, 530D, 600, 630, 6300, 750, 800, 820, 820D, 830D, 900, 9000 Canon SELPHY DS700, DS810 Canon SmartBase MP360, MP370, MP390, MP700 Photo, MP730 Photo, MPC190, MPC200 Photo, MPC400, MPC600F
-----------------	--