

Foundation GP 60 with cable inlet


Article no: 27 000 71

Mounting instructions

For ground mounting 60 mm steel tubes or charging stations.

Included for installation

1 x plastic foundation
1 x bracket for steel pipe

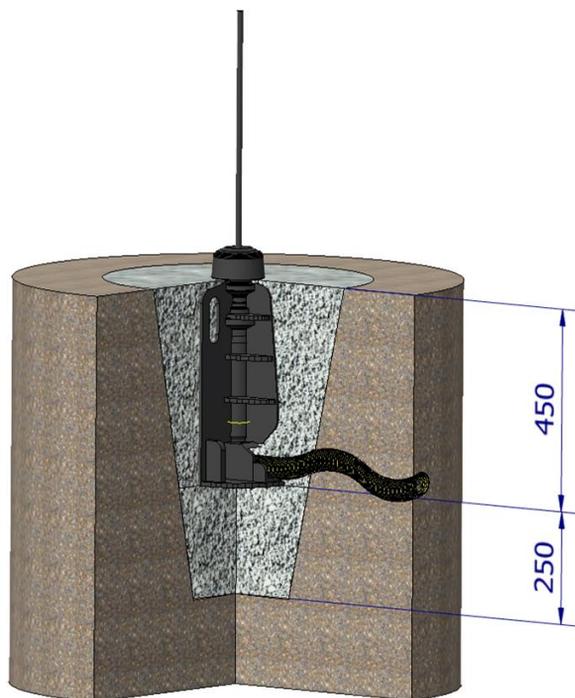


Mounting the foundation

The foundation should be positioned on well-drained wiring bed. Pits are excavated 25-30 cm deeper than the depth of subsidence of the foundation. The bottom is refilled with macadam 0-18 mm and tight packed with hand utensil to a well-balanced level. Backfilling around foundation GP60 is done with macadam 0-18 mm which is packed well to a level where you can use a vibrating machine to finished surface.

During this work, the foundation should be adjusted so that it is constantly standing in plumb. This is important as the stabilization edges of the foundation make it difficult to adjust afterwards.

When a steel pipe-mounted charging station is to be mounted, the bottom edge of the top should be a just above ground level.

Illustration 2:

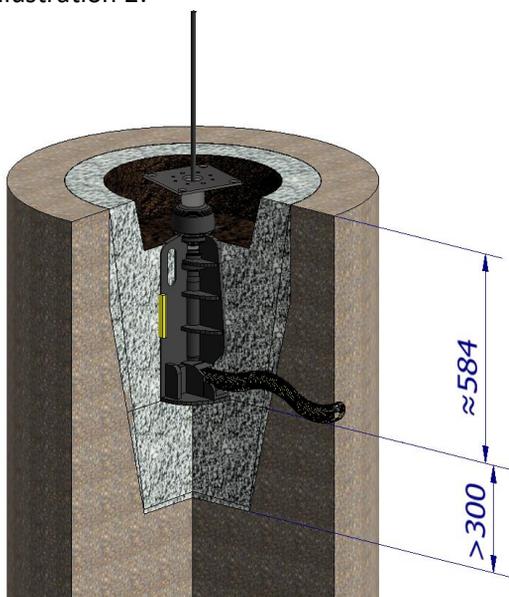

Note:

When a ground-mounted charging station is to be installed, the entire foundation should be placed below ground level so that the mounting plate that is inserted into the foundation is level with the ground. The bracket is mounted in the foundation and locked before the last of the backfill is put in place. See Illustration 2.

Fundament GP 60 med kabelintag

E-nr: 27 000 71

Monteringsanvisning

För markmontering av 60 mm stolprör eller laddstationer.

Inkluderat för installation

1 x fundament av plast
1 x klammer för stolprör

Installation av fundament

Fundamentet ska grundläggas på väl-dränerad ledningsbädd. Grop schaktas 25-30 cm djupare än fundamentets nedsättningsdjup. Botten återfylls med makadam 0-18 mm och packas med handstöt eller motsvarande till välavvägd plan.

Återfyllning kring fundament GP60 sker med makadam 0-18 mm som packas väl till en nivå där man kan använda en vibreringsmaskin till färdig yta. Fundamentet ska under detta arbete justeras så att det hela tiden står i lod. Detta är viktigt då fundamentets stabiliseringskanter gör att det är svårt att justera i efterhand.

När en stolpmonterad laddstation ska monteras så bör underkant på hatten vara något över marknivån.


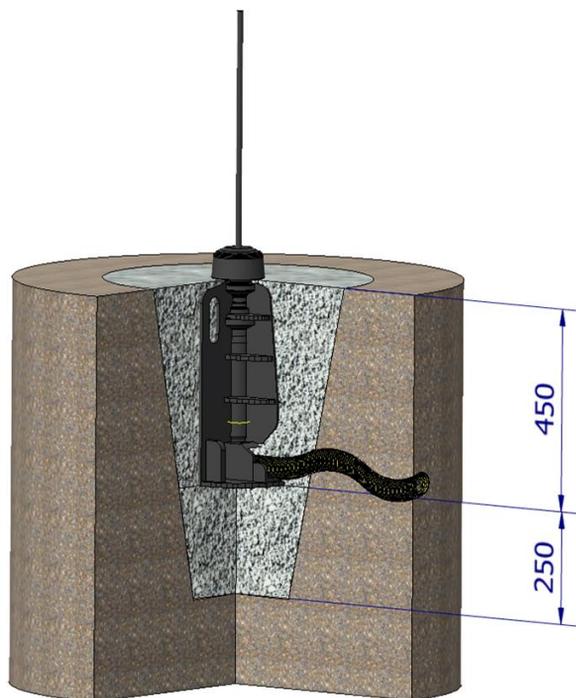


Illustration 2:

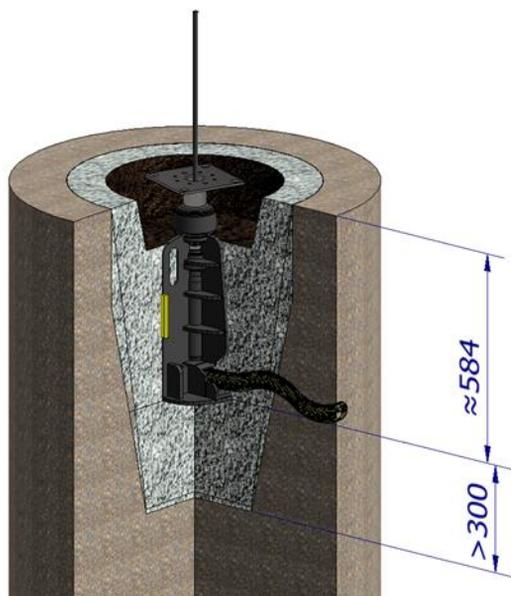

OBS!

När en markmonterad laddstation ska monteras så ska hela fundamentet placeras under marknivån så att montageplattan som sticks ner i fundamentet kommer i nivå med marken. Fästet monteras i fundamentet och låses fast innan det sista av återfyllningen läggs på plats. Se Illustration 2.