



Instruction Manual

- ① Remove the Tail cover before installation.

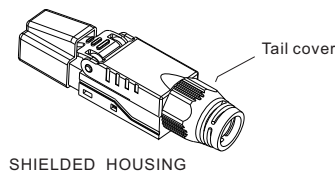

JACK PIN DESIGNATIONS		TIA/EIA T568A	TIA/EIA T568B
	1	White/Green	white/Orange
	2	Green	Orange
	3	white/Orange	White/Green
	4	Blue	Blue
	5	white/Blue	white/Blue
	6	Orange	Green
	7	White/Brown	White/Brown
	8	Brown	Brown

- ② Insert cable into strain relief boot, strip off 1.2 inch of cable jacket, fold back braid and drain wire.


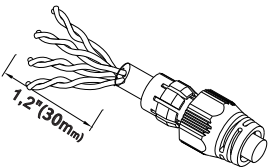


Boot adjustment


Cut the end of boot to fit your cable OD.




- ③ Fan out all four twisted pairs, following the color coding label and allocate each conductor into proper slots on wiring cap. Trim the ends of conductors.

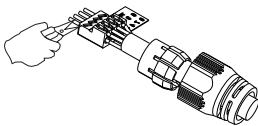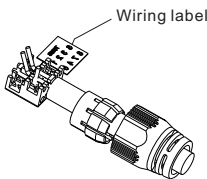


- ④ Place wiring cap on plug.

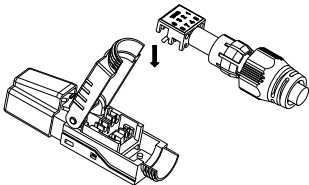

- ⑤ Place the wiring cap on to plug, use plier to clamp wiring cap until it completely snap-in to effect the connection.

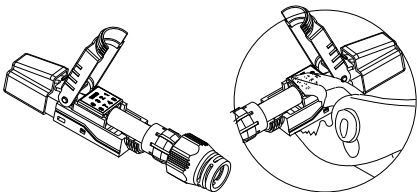

- ⑥ Place the tightening sleeve well, straighten out the drain wire to ensure that the grounding is correct and reliable, close the lid, tighten the tail sleeve, and finish the wiring.

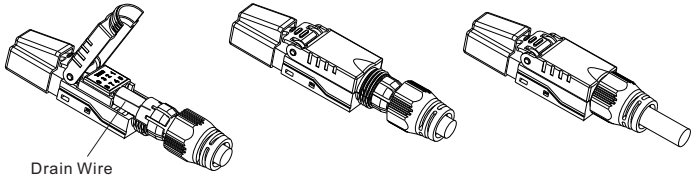

120*210