



MOD. DRIVE

NOMBRE	FOTO	1 PUERTA	CODIGO ARTICULO	NOMBRE	FOTO	1 PUERTA	CODIGO ARTICULO
DRIVE		4	9037.206	CIERRE AMORTIGUADO		2	9037.207
ST4*16 CABEZA EN CRUZ		16		LLAVE ALLEN		1	
GUIA 3M		1	9037.202				


PROCEDIMIENTOS DE INSTALACIÓN

MOD. DRIVE

TAMAÑO DEL ARMARIO




DIMENSIÓN DE LA RANURA PARA LA PISTA

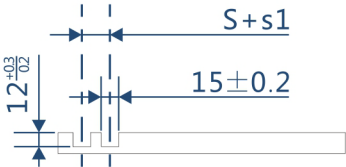

REQUISITO PARA LA DIMENSIÓN DEL ANCHO DE LA PUERTA




DIMENSIÓN DE LA RANURA DEL PANEL DE LA PUERTA

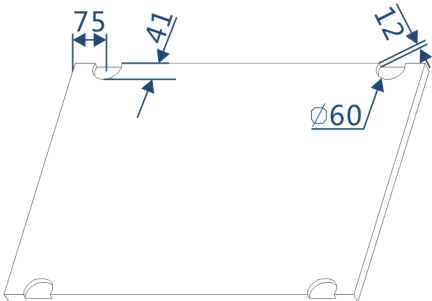


INSTALACIÓN DEL FRENO AMORTIGUADO



INSTALACIÓN DE LA GUIA

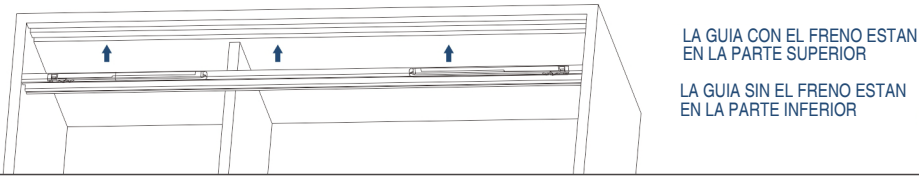

INSTALACIÓN DEL HERRAJE DRIVE

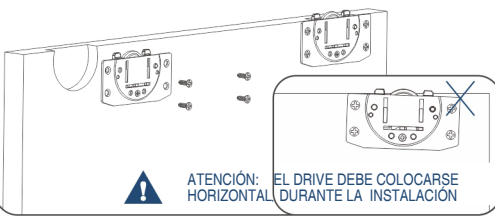


REGULACIÓN DEL DRIVE




INSTALACIÓN DE LA PUERTA



MÉTODOS DE AJUSTAR EL DRIVE ARRIBA Y ABAJO

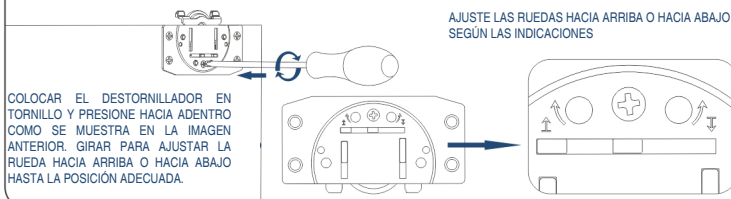

BLOQUEAR EL FRENO AMORTIGUADOR

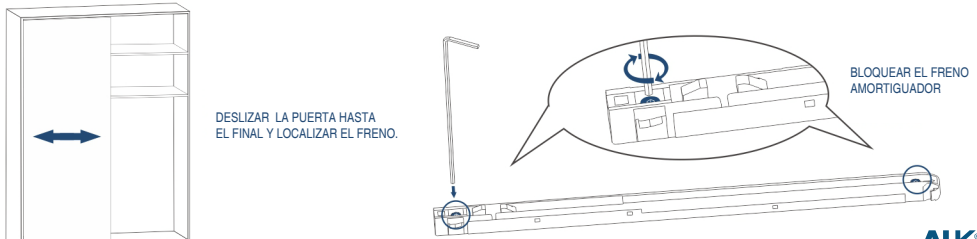




MOD. DRIVE

NAME	PHOTO	1 DOOR	ITEM CODE	NAME	PHOTO	1 DOOR	ITEM CODE
DRIVE		4	9037.206	DAMPER		2	9037.207
ST4*16 CROSS HEAD TAPPING SCREWS		1		ALLEN KEY		16	
TRACK		1	9037.202				


INSTALLATION PROCEDURES

MOD. DRIVE


SIZE ON WARDROBE

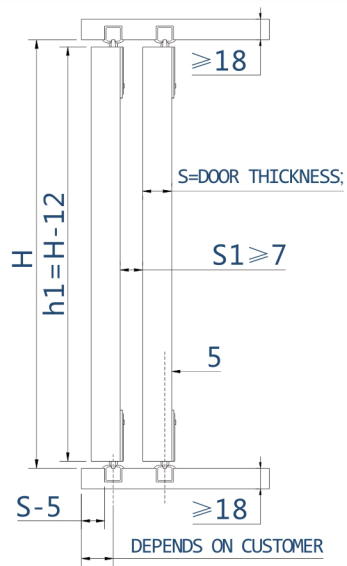


REQUIREMENT FOR DOOR WIDTH DIMENSION

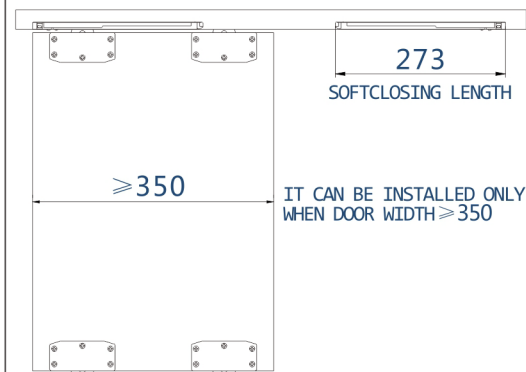


DOOR PANEL SLOTS DIMENSION

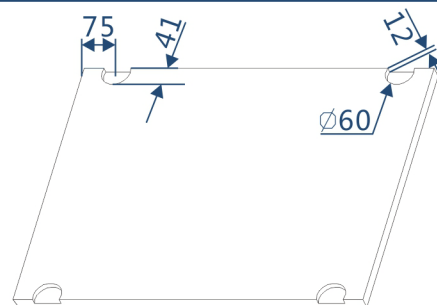


SLOT DIMENSION FOR TRACK

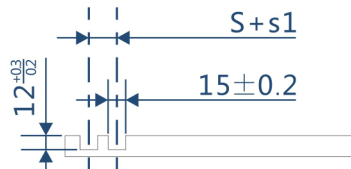


1.DAMPER INSTALLATION

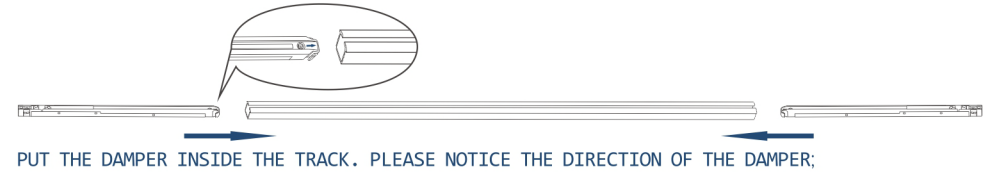

2.TRACK INSTALLATION

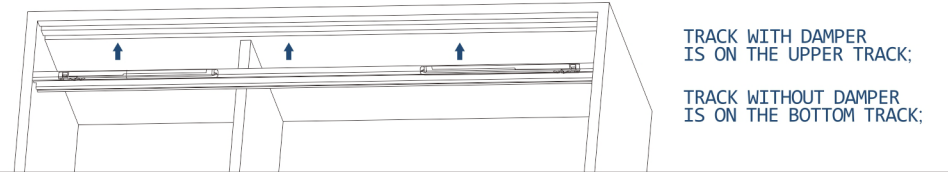

3.RUNNER INSTALLATION

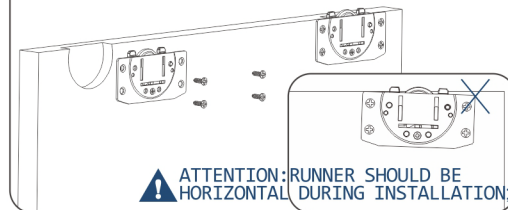


4.RUNNER REGULATION


4.1 PRESS TO LOCK → 4.2 LOCK THE RUNNER



5 DOOR PANEL INSTALLATION

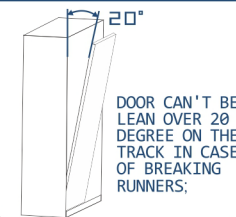

6.METHODS TO ADJUST RUNNER UP OR DOWN

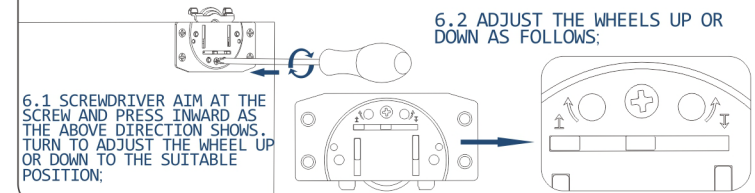

7.LOCK THE DAMPER

