




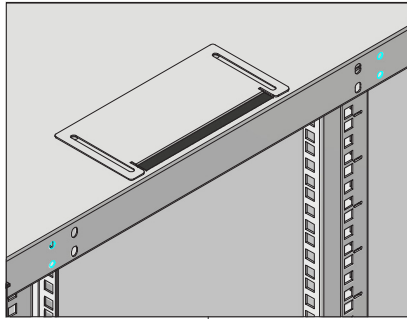


1. The **M5x15 screw** is mounted in the hole on the profile shown in the image. Each profile should have 4 screws. The additional body is placed in the section shown here.

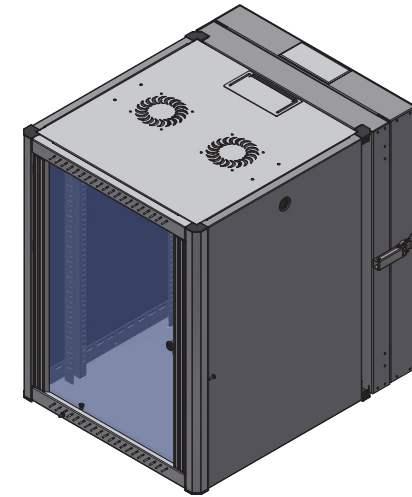


M5x15 Screw

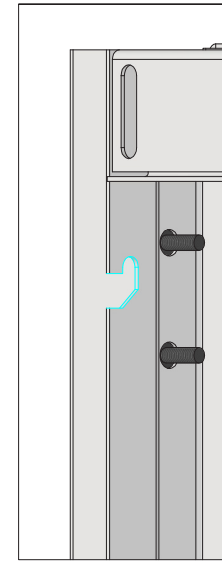


Assembled Version

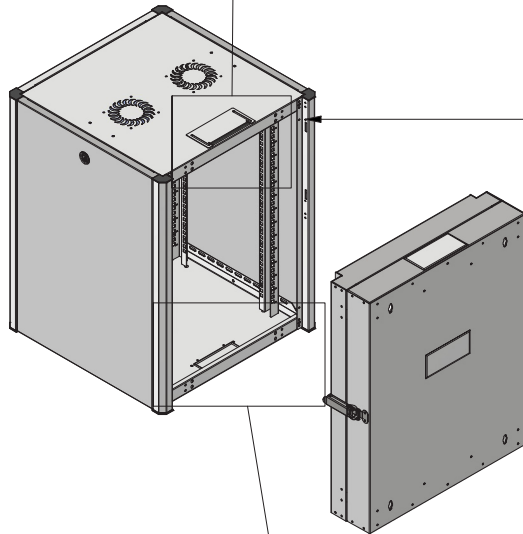

M5x12 screw

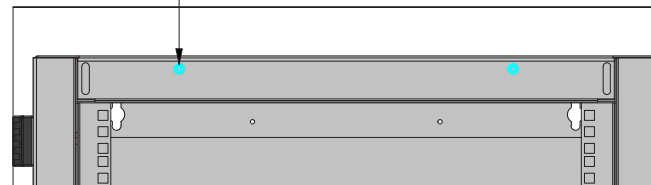

2. After the additional body is placed, install the **M5x12 screws** from the inside of the cabinet at the points where the **M5 round rivet nuts** are located. The assembly to the cabinet is complete.

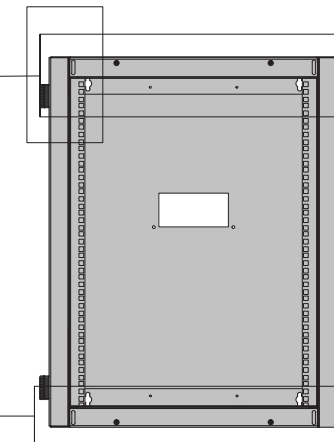

**Additional Body
Front View**